

Repair manual

For prod. code 127 8705 et seq.

Repairing the inner tube

In the repair set, you should find the key for opening the valve.

1. Unscrew the valve cover and place the key into the recesses on the top of the valve body.
2. Loosen the valve, turning it anti-clockwise.
3. Unscrew the entire valve body and remove it from the valve connector.
4. Open the zip on the inside of the trampoline cover and take out the inner tube.

After the repair, assembly is in reverse order.

Important information

It is necessary to put the inner tube into the trampoline carefully and to align it, so that the valve sits properly in the trampoline cover.

When inflating for the first time, only inflate the trampoline to approx. 40% of the maximum air pressure.

Now, tap the cover all over to ensure the inner tube sits properly in the cover. When inflating for the second time, inflate fully and then re-tighten the valve using the key.