

Sport-Thieme Massageröhre „Relax“

Vielen Dank, dass Sie sich für ein Sport-Thieme Produkt entschieden haben!

Damit Sie viel Freude an diesem Gerät haben und die Sicherheit gewährleistet ist, sollten Sie diese Anleitung zunächst vollständig durchlesen, bevor Sie mit der Verwendung beginnen. Für Fragen und Wünsche stehen wir Ihnen gerne zur Verfügung.



Mit der Massageröhre können Sie Ihren gesamten Körper wunderbar massieren. Die Röhrenform und der weiche Moosgummiüberzug passen sich perfekt jeder Körperform an.

Einlegen der Batterien:

Die Massageröhre arbeitet mit 2 Batterien der Größe C (nicht enthalten). Drehen Sie die Kunststoffverschlüsse an beiden Enden der Massageröhre im entgegengesetzten Uhrzeigersinn ab und legen Sie die Batterien ein. Folgen Sie dabei den Angaben an den Endkappen. Danach befestigen Sie die Verschlüsse wieder. (siehe Abb. 1)

Inbetriebnahme der Massageröhre:

Entfernen Sie das Klettband. Schalten Sie die Massageröhre mithilfe des Schalters an einer der Endkappen ein. Der Schalter lässt sich 2-fach verstellen. So können Sie 2 verschiedene Vibrationsstärken wählen. Beginnen Sie aber zunächst mit der schwächeren Einstellung und steigern Sie sie. Mit dem Klettband können Sie die Massageröhre auch freihändig nutzen. (siehe Abb. 2.1 – 2.3)

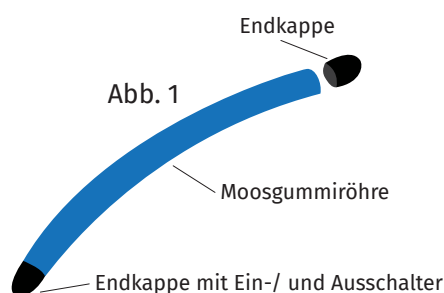


Abb. 2.1 – 2.3



Klettband



Klettband lösen



Beide Enden
zusammen führen



Sport-Thieme Massage Tube 'Relax'

Thank you for choosing a Sport-Thieme product!

Please read the following notes carefully before use so you can enjoy this product safely and keep these instructions for future reference. If you have any questions, our team is here for you.



This massage tube is a great tool for effectively massaging your entire body. Its shape and soft sponge-rubber cover adapts perfectly to your body.

Inserting the batteries:

The massage tube requires two C batteries (not included). Remove both plastic caps on the tube by turning them anticlockwise and then insert the batteries. Follow the instructions on the caps. Then put the caps back on again (see figure 1).

Using the massage tube:

Remove the hook-and-loop band. Turn on the massage tube using the switch on one of the caps. There are two speed settings. We recommend the weaker vibration intensity to start with. Thanks to the hook-and-loop band, the massage tube can be used hands-free (see figures 2.1 – 2.3).

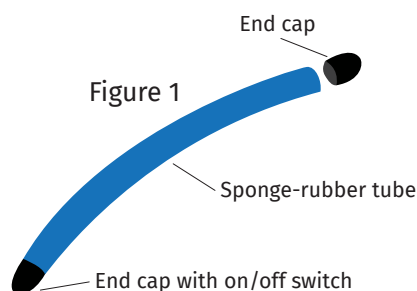


Figure 1

Figure 2.1-2.3



Hook-and-loop band



Loosen band



Connect both ends

