

Assembly instructions
'Kristall' Safety Mirror


Product code: 177 6661 et seq.

Thank you very much for choosing a Sport-Thieme product!

Please read the instructions fully before you set up the equipment, so you can enjoy the product and safety is guaranteed.

Should you have any questions or requests, we are happy to help.

Installation drawing

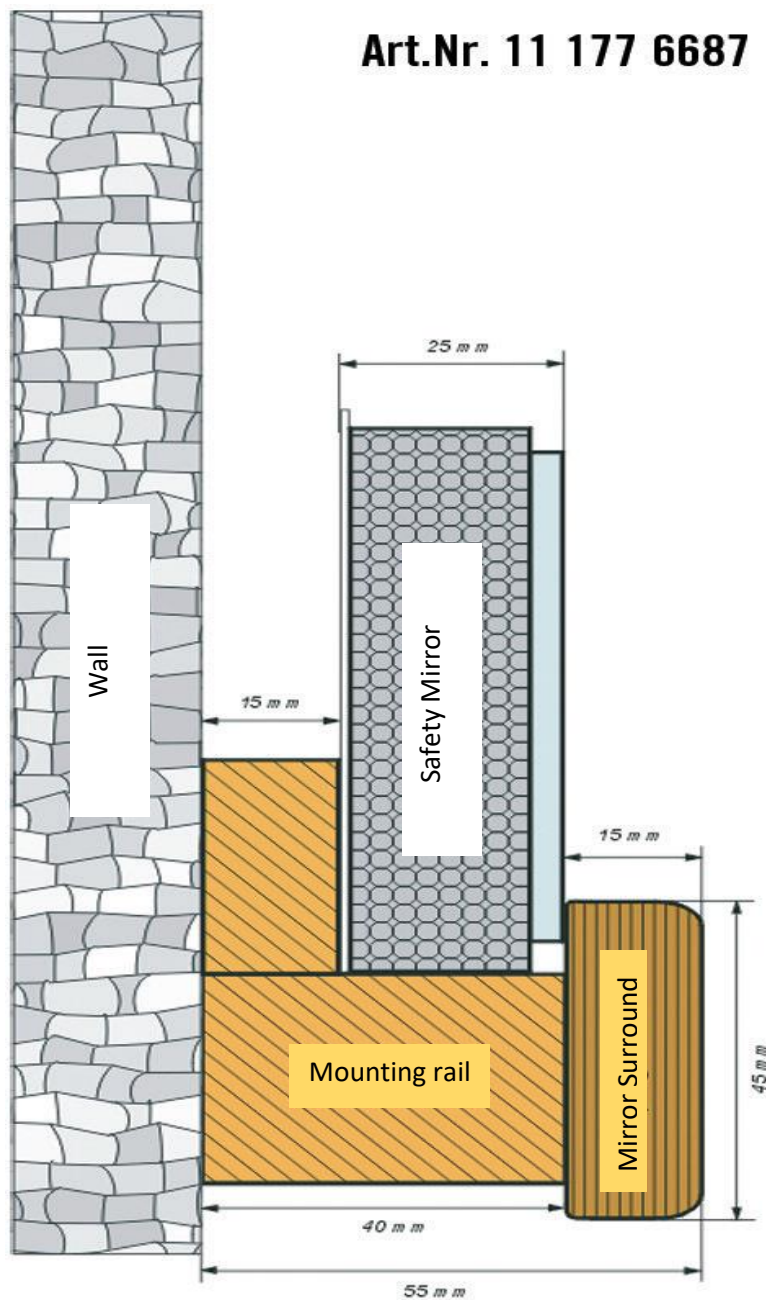

**Important: Please check that the delivery is complete and that nothing was damaged during transport in the presence of the carrier.
Please use the delivery note enclosed.**

Parts list:

- Mounting rails
- Mirror surround
- Side covers
- 'Kristall' safety mirror

The fixings are not included.

Please note that the enclosed rails, surround and covers need to be cut to the dimensions required!

The following tools and materials are required for assembly:

- Cordless screwdriver
- Spirit level
- Mitre saw
- Power drill
- 2 suction cups
- Depending on the construction of your wall: screws, wall plugs and screw head covers

Please note that the 'Kristall' safety mirror should be assembled by 2 people!

Step 1:




Attach the mounting rails to the wall based on the size of your mirror. Please note that the mounting rails are to be fixed to the wall 5 mm above the mirror, so that there is still a small clearance between the mirror and the rail.

Step 2:



Loosely screw the upper mirror surround to the upper mounting rail. Please make sure that the mirror surround protrudes 3 cm from the mounting rail. For smooth corner joints on the mirror surround, the surround strips must be mitred.

Step 3:

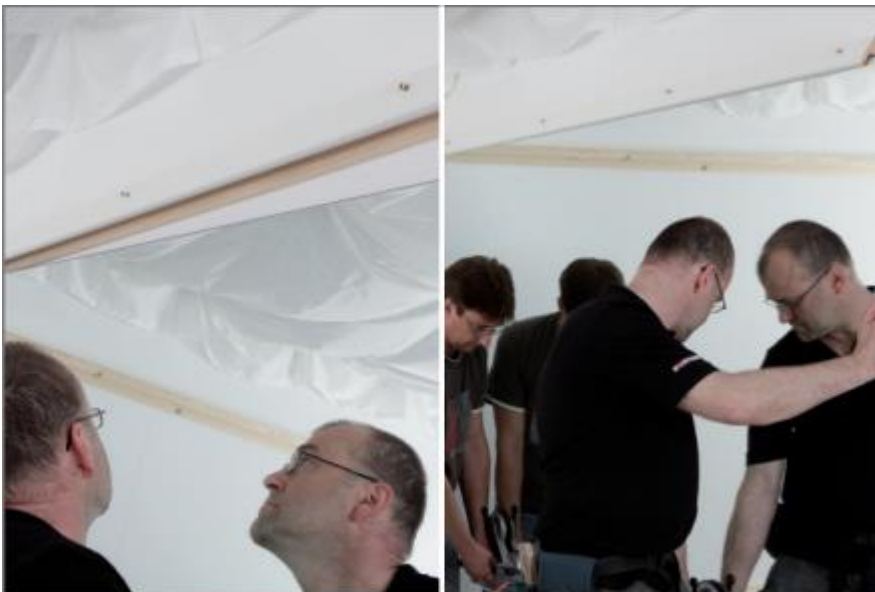

Now insert the mirror between the rail and the surround, sliding it from the bottom upwards, and place it onto the lower mounting rail.

Step 4:



The upper mirror surround can now be adjusted and screwed tight.

Step 5:



The lower mirror surround can now also be adjusted and screwed tight. Don't forget to mitre the surround strips!

Step 6:



Now attach the side covers to the installation by screwing them onto the mounting rails.

Step 7:



Next, attach the mirror surround to the side covers. (Please note that the strips of the mirror surround have to be mitred.)

Step 8:



Finally, conceal the screws with the screw head covers.